

POWER IN

TERMINAL

(COMMON)

NORMALLY OPEN TERMINAL NORMALLY CLOSED TERMINAL

CAUTION:

CALIBRATION

SCREW - SEE


INSTRUCTIONS

FLOWSWITCH INSTRUCTIONS

Models; FS-1, FS-1.5-15, FS-1.5-20, FS-1.5-230 and FS-2

SWITCH INSTALLATION:

- 1. Inspect Flowswitch for any damage that may have occurred during shipping.
- Note the port marking on the Flowswitch housing Flow In and Flow Out.
- For proper operation the Flowswitch must be mounted horizontally and level.

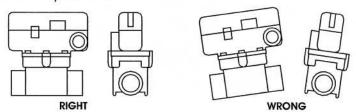

- Use the Flowswitch in filtered liquids only to prevent foreign objects from interfering with the Flowswitch operation.
- 5. Install filter or strainer before Flowswitch to prevent the risk of sand and/or debris from interfering with the Flowswitch operation.
- When a chlorine generator is to be used in plumbing system the generator must be installed down stream and away from Flowswitch - chlorine will attack Titanium parts.
- Caution when cementing Flowswitch into plumbing system PVC cement must not enter the inlet port and cause interference with Flowswitch operation.
- 8. Use an IAPMO, NSF, or ASTM approved or listed PVC cement and follow manufacturers instructions for use.
- A 1/2 Inch threaded socket is provided to accept either a cord restraint or flex conduit. You must check and use local and/or national electric codes for your application.
 Note: Do not use rigid conduit.

ELECTRICAL CONNECTION: (Model FS-2 only)


- 10. Remove cover by unscrewing the three cover screws.
- 11. Use push-on "Quick Connect" (0.032 X 0.250) connectors to attach wires to the switch terminals.
- 12. Route all wires on the top side of the switch to prevent wires from interfering with the switch operation.
- 13. Replace cover and hand tighten the three cover screws.

NOTE: N.O. = Normally Open **(LOAD)** Terminal. Connect to power **IN** on device to be switched if you want this device to be energized when water flows through the Flowswitch at its set point.

FACTORY SETTINGS:

All Flowswitches are factory set at the lowest set point "GPM" that each Flowswitch can safely be set at.

CAUTION: Do not screw the calibration screw down - this may cause the flowswitch to stick in the ON position.

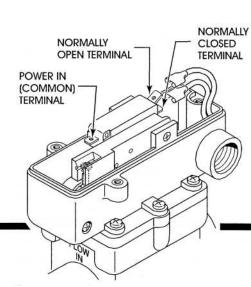

4-3/4"

Rev 12/8/17

Aqua Logic, Inc.

9558 Camino Ruiz, San Diego, CA. 92126

Ph: 858.292.4773 Fax: 858.279.0537 Web-site: www.agualogicinc.com